

Rozměry ložisek do krku řízení

Obj. číslo	Ložisko horní			Ložisko spodní			Poznámka
	Ø vnitřní	Ø vnější	výška	Ø vnitřní	Ø vnější	výška	
SSD901	35	55	14,5	35	55	14,5	+ 2 prachovky
SSH200	22,4	41	12,5	24	41	12,5	+ 1 prachovka
SSH500	27	48,5	18	26	48,5	15	
SSH750	26	48,52	15,2	30	49,98	14,4	
SSH901	25	47	15	30	55	17	+ 1 prachovka
SSH902	26	47	15	26	47	15	+ 1 prachovka
SSH902R	26	47	15	26	47	15	+ 2 prachovky
SSH903	26	47	15	30	55	17	+ 1 prachovka
SSH903R	26	47	15	30	55	17	+ 2 prachovky
SSH904	26	47	15	30	51	15	+ 2 prachovky
SSH905	30	51	15	30	51	15	+ 2 prachovky
SSH907	30	51	15	30	55	17	
SSH908	26	47	15	26	47	15	+ 2 prachovky
SSH910	30	50	15	30	50	15	+ 2 prachovky
SSH911	26	47	15,3	35	55	14,5	+ 2 prachovky
SSH912							
SSK100	30	48,03	12	30	48,03	12	
SSK110							
SSK400	30	48,03	14	30	52,03	17	
SSK902	25	47	15	28	52	16,5	
SSK902R	25	47	15	28	52	16,5	horní ložisko s integr. prach.
SSK905	28	52	16,5	30	55	17	2 integrované prachovky
SSK907	35	55	14	35	55	14	
SSK907R	35	55	14	35	55	14	+ 1 prachovka
SSK908	25	47	15	35	55	14	
SSS250	25	48,03	16	27	48,03	14	
SSS901	25	47	15	26	47	15	+ 1 prachovka
SSS902	25	48	13	30	55	17	
SSS903	30	55	17	30	55	17	+ 1 prachovka
SSS903R	30	55	17	30	55	17	+ 2 prachovky
SSS904	30	52	16	30	52	16	2 integrované prachovky
SSS904S	30	52	16	30	52	16	+ 2 prachovky
SSS906	30	52	16	30	52	16	1 integrovaná prachovka
SST901	29	50	15	29	50	15	
SSW055	33,97	50,98	12	33,97	50,98	12	
SSW901	28	52	16,5	28	52	16,5	
SSW902	25	52	16,5	25	52	16,5	
SSW903	20	47	20,6	20	47	20,6	kuličková ložiska
SSY080	25	43,02	11	30	48,03	12	
SSY125	25	48,03	13	30	48,03	12	
SSY500	25	48,03	15,2	30	48,03	15	
SSY901	28	52	16,5	28	52	16,5	1 integrovaná prachovka
SSY903S	28	52	16,5	30	52	16,5	+ 2 prachovky
SSY903T	28	52	16,5	30	52	16,5	+ 2 prachovky
SSY904	28	52	16,5	30	52	16	+ 1 prachovka